

Stars and squares

 
- Tapering in the hoop -



1

(First; make sure you are in Sewing Mode.)

Selection menu.




2

Touch...

- category 4; Decorative stitches
- subcategory 1; Scallop edges
- stitch number 12

Creative 4.0 Stitch 11

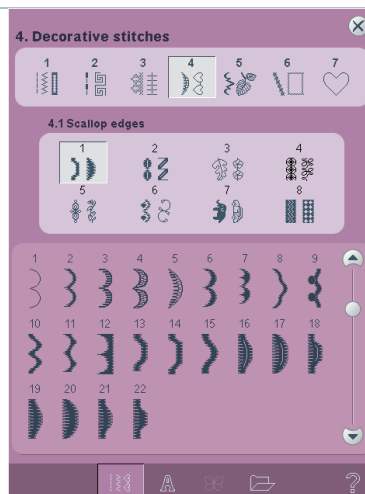

3

Sewing programs.




4

Long touch on Tapering beginning.




- 5 Select 45 degrees, right justified.

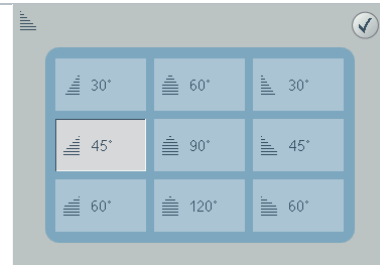

- 6 Long touch on Tapering end




- 7 Select 45 degrees, right justified.

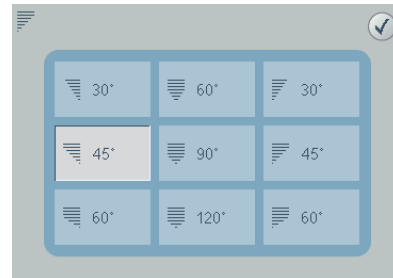

- 8 Touch Single stitch program



- 9 Touch + to get a total of 4 stitches and a length of 80mm.

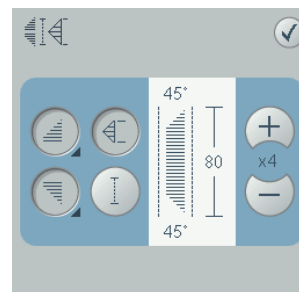


- 10 OK




- 11 Save the programmed stitch to your Personal Menu.

 Touch Save Options



- 12 Save it under Personal menu 1 - position 1 (Or if you like; save it in another free menu and position).

Touch OK to confirm and close the Save to Personal menu pop-up.

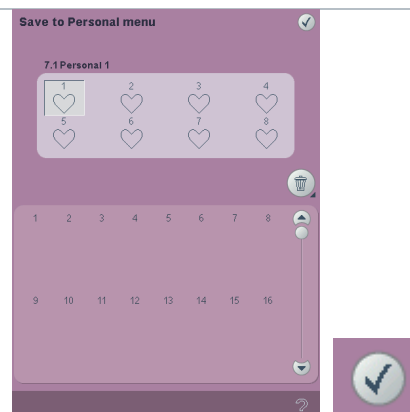

When you save a stitch in your Personal files - you can copy it to your USB Embroidery Stick and/or computer.

When you save a stitch in your Personal Menu - you can easily access it along with all of your stitches through the Stitch Menu.


You can save it in either option or both.

13 Selection menu.



14 Touch...

- category 2; Quilt stitches
- subcategory 4; Crazy patch stitches
- stitch number 3

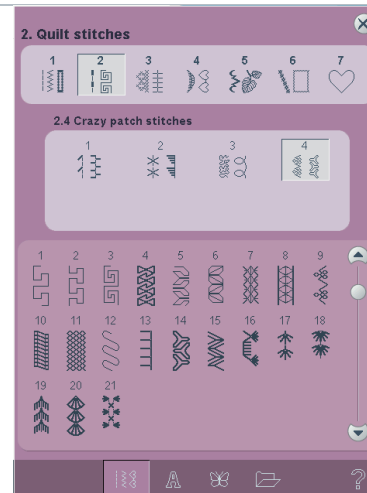

15 Sewing programs.



16 Touch Tapering beginning to activate right justified 45 degrees angle.

(This time you don't need to long touch and select angle, because we would like to have the same angle as we had last time)



17 Touch Tapering end to activate right justified 45 degrees angle.


(This time you don't need to long touch and select angle, because we would like to have the same angle as we had last time)



18 Touch Single stitch program



- 19 Touch + to get a total of 3 stitches and a length of 33mm.

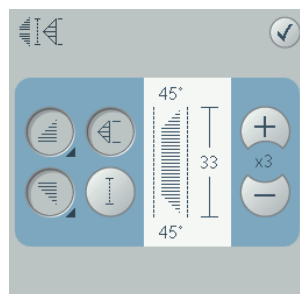

- 20 OK




- 21 Save the programmed stitch to your Personal Menu.

Touch Save Options



- 22 Save it under Personal menu 1 - position 2 (Or if you like, save it in another free menu and position).

Touch OK to confirm and close the Save to Personal menu pop-up.

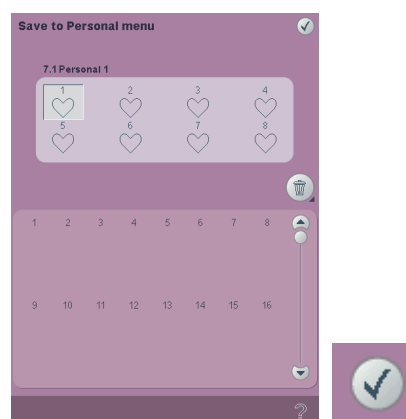

- 23 Switch over to embroidery mode.

Touch Sewing/embroidery toggle icon.




- 24 To open the first one of your two saved tapered programs in embroidery mode, touch Selection menu



Select the first stitch of your two tapered stitch programs that you saved in your personal menu.

- 25 If you saved it in the first sub menu it would be....
- category 7; Personal stitches
 - subcategory 1
 - stitch number 1

C4.0 category 5; SC 1; S# 1

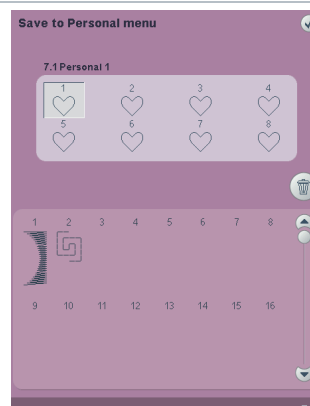


- 26 When you open the saved tapered program in embroidery mode it will be converted to an embroidery design.

Touch OK.




- 27 Touch Hoop selection in the options bar and select creative ELITE hoop 260x200.

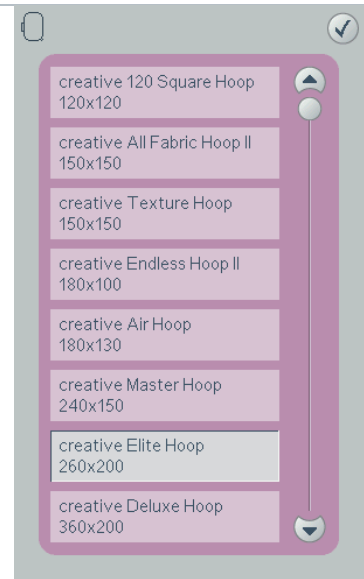

- 28 We would like to place the design as far as possible down in the lower right hand corner of the hoop.

Drag and drop the design down and right.

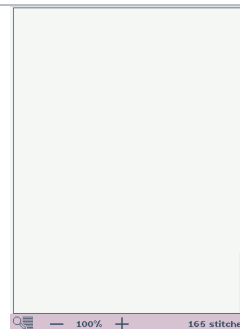

- 29 Touch Move design into hoop.
The design will be placed as far out as possible in the direction you've placed it.




- 30 Touch Duplicate.



- 31 Now we would like this design to be stitched out directly after the first design, without any jump stitches. Which means that we have to rotate it.

Activate rotate.
Touch in the center of the wheel to rotate the design by 90 degrees.

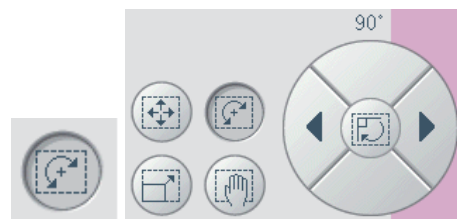


- 32 Activate Move again.



33

We would like to place the design as far as possible down in the lower right hand corner of the hoop.

Drag and drop the design down and right.

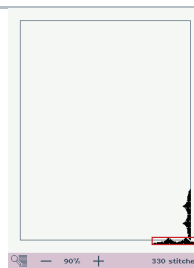

34


Touch Move design into hoop.

The design will be placed as far out as possible in the direction you've placed it.



35

Long touch on Multi-select to select all designs on screen.

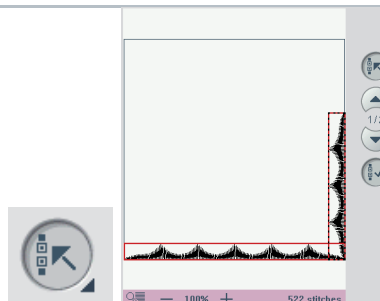

36

Touch Group.
C4.0 - Skip this step



37

Touch Duplicate.



38

Now we would like this design to be stitched out directly after the first design, without any jump stitches. Which means that we have to rotate it.

Activate Rotate.
Touch twice in the center of the wheel to rotate the design by 180 degrees.




39

Touch Move design into hoop.

The design will be placed as far out as possible in the direction you've placed it. Which means that you will get a perfect square.

C4.0 - Skip this step

C4.0 - Move to Coordinates 59.7/-89.7

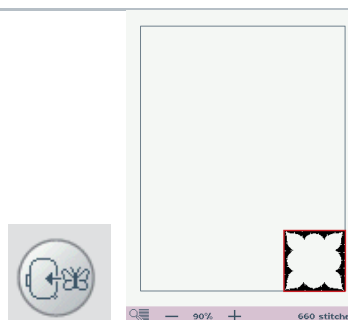

40

Long touch on Multi-select to select all designs on screen.



41


Touch Group.
C4.0 - Skip this step



42 Touch Duplicate.



43 Drag and drop the duplicated design on screen. Use the Wheel to fine tune. The coordinates should be -20.0/-10.0

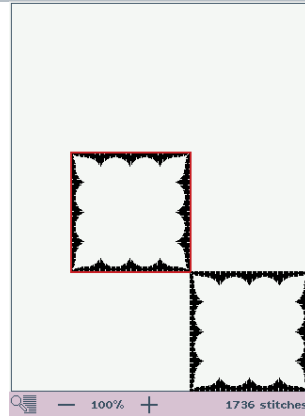

44 Long touch on Multi-select to select everything on screen.



45 Touch Group.
C4.0 - Skip this step





46 Touch in the center of the Wheel to place the design in the center of the hoop.



47 Touch Rotate.



48 Touch the right arrow to rotate the design by 45 degrees.

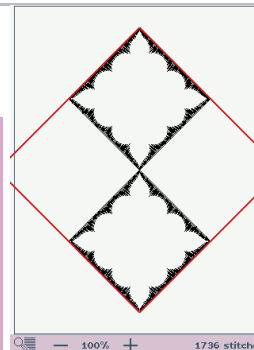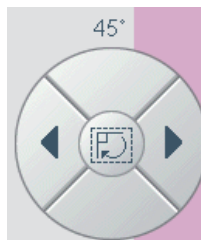


49 To open the second one of your two saved tapered program in embroidery mode, touch Selection menu



Select the second stitch of your two tapered stitch programs that you saved in your personal menu.

- 50 If you saved it in the first sub menu it would be....
- category 7; Personal stitches
 - subcategory 1
 - stitch number 2

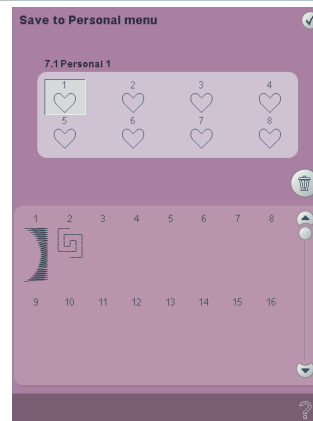

- 51 When you open the saved tapered program in embroidery mode it will be converted to an embroidery design.

Touch OK.



Make sure Move is active.

- 52 Drag and drop the design on screen. Use the Wheel to fine tune. The coordinates should be 52.0/16.5




- 53 Touch Duplicate.



- 54 We would like this design to stitch directly after the first design without a jump stitch. Which means that we have to rotate it.

- 54 Activate rotate. Touch twice in the center of the wheel to rotate the design by 180 degrees.

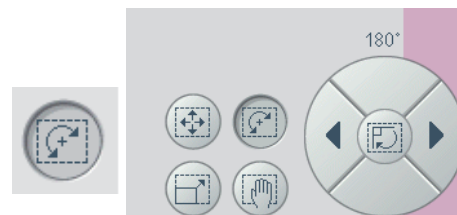


Touch Move again.

- 55 Drag and drop the design on screen. Use the Wheel to fine tune. The coordinates should be 61.0/16.5



- 56 Touch Multi-select. Arrow up to mark design #2. Touch Select design to select both designs. C4.0 mark design 9/10

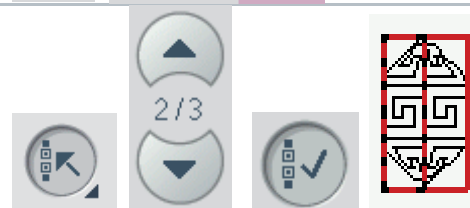


- 57 Touch Group.
C4.0 - Skip this step



- 58 Touch Duplicate.



- 59 We would like this design to stitch directly after the first design without a jump stitch. Which means that we have to rotate it.
Activate rotate.
Touch in the center of the wheel to rotate the design by 90 degrees.

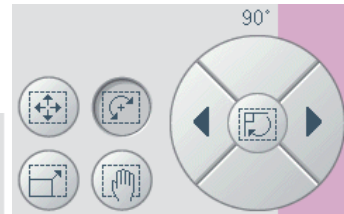

- 60 Touch Move again.
Drag and drop the design on screen.
Use the Wheel to fine tune.
The coordinates should be 73.0/0.0



- 61 Touch Multi-select.
Arrow up to mark design #2.
Touch Select design to select both designs.
C4.0

 


Arrow up to mark # 10 touch select
Arrow up to mark # 9 touch select


- 62 Touch Group.
C4.0 - Skip this step



- 63 Touch Duplicate.




- 64 We would like this design to stitch directly after the first design without a jump stitch. Which means that we have to rotate it.
Activate rotate.
Touch twice in the center of the wheel to rotate the design by 180 degrees.

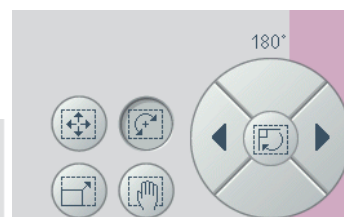

65

Touch Move again.

Drag and drop the design on screen.
Use the Wheel to fine tune.
The coordinates should be 44.5/-12.0

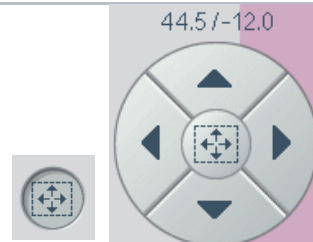

66

Touch Multi-select.
Arrow up to mark design #2.
Touch Select design to select both designs.
arrow up to #9 & select {repeat for 10,11,12}



67

Touch Group.
C4.0 Skip this Step



68


Touch Duplicate.



69

Drag and drop the design on screen.
Use the Wheel to fine tune.
The coordinates should be -56.5/0.0

C4.0 Save design!

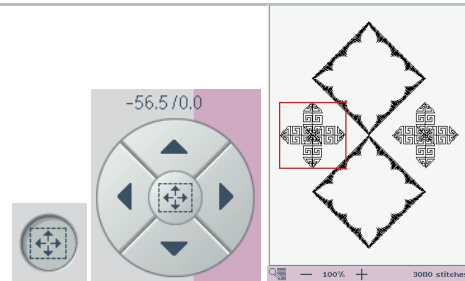


70

Touch Thread color edit.



71

Touch Color block 1:1 and
activate Multi-select.

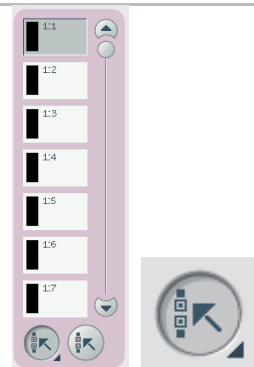

72

Touch each Color block up to block #1:8.

C4.0 Touch each Color Block up to Block #8:1




- 73 Touch Quick color change
Pick a color you like
Touch OK.



- 74 Deselect the color blocks of the two frames by touching all color blocks again.

- 75 Touch color block #2:1 in the Color block list
C4.0 - Touch Color block #9.1

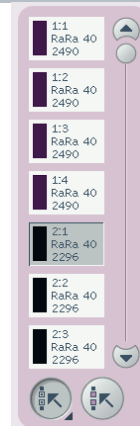

- 76 Touch Select equal colors.



- 77 Touch Quick color change
Pick a color you like
Touch OK.



- 78 Touch OK to close the Thread color edit pop up.



- 79
- Hoop your fabric
 - Attach the creative ELITE HOOP on the embroidery arm.
 - Touch Embroidery toggle icon to move to embroidery Stitch out mode.
 - Start to embroider.

