
 
 




Twin needle







- 1 Task bar. Settings menu 
- 2 Touch the "Twin needle" icon to open up a list for twin needle width selections. 
- 3 Touch the twin needle size of your choice. 
- 4 Touch OK to close the settings menu. 
- 5 The machine settings field now shows that you have set your machine for twin needle sewing. 

4.4.17

- 6 Select any of the built in stitches and sew a new decorative stitch. Make sure you are following the recommendations in the recommendation field, use the correct presser foot, stabilizer etc.

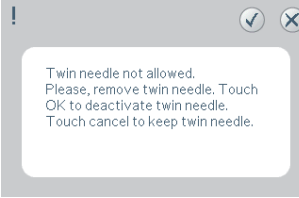

-
- 7 If you get a pop-up telling you that the selected twin needle is not allowed, the stitch is probably too wide for the set twin needle size or the selected stitch doesn't support twin needle sewing.
- You can change to another twin needle size or select another stitch.
- 
-
- 8 Touch cancel (the cross) to keep the twin needle and go to another stitch.
- 
- Touch OK (the checkmark) to deactivate the twin needle and either go back to the settings menu to select another twin needle size or to sew the selected stitch without a twin needle.
- 
-
- 9 Follow your Owner's manual (page 2:6) for threading a twin needle
- 
-