

Free-motion sewing



1	Task bar. Settings menu	55 XI 1 ?	-
2	There are two different free-motion modes. You can select to set your machine for either Sensormatic free-motion or Spring foot free-motion.	Free-motion Sensormatic free-motion Spring foot free-motion	
3	Touch the Sensormatic free-motion to set your presser foot to float over the fabric you wish to stipple.	Sensormatic free-motion	
	When sewing at a low speed the presser foot will raise and lower with each stitch to hold the fabric on the stitch plate while a stitch is being formed. At a higher speed, the presser foot floats over the fabric when sewing.		
4	The Sensormatic free-motion mode is used together with the 6A presser foot that is included with the machine.		
	With the Sensormatic free-motion mode it's easy to get even stitches and a very nice result.		
5	If you want to change the presser foot height in Sensormatic free-motion mode,	Sensormatic	
9	long touch on the icon. Ihis will bring up a pop-up to set the presser-foot height.	Tree-motion	_

creative vision Techniques Book

6	Touch the plus to raise the presser foot and the minus to lower the presser foot.	
7	Touch OK to confirm your Sensormatic free-motion presser foot height.	
8	Touch OK to close the settings menu.	
9	When the machine is set for free-motion sewing the feed dogs are lowered automatically.	
10	The machine settings field now shows that you have set your machine for Sensormatic free-motion sewing.	
	Select any of the built in stitches and sew.	
11	Most free-motion sewing is stitched with a straight stitch or with a zigzag stitch. However all stitches can be sewn in free- motion mode. Your movement of the fabric will determine how the stitch will look.	
12	Touch the Spring foot free-motion to set your presser foot "jump" on the fabric while sewing.	Spring foot free-motion
	The Spring foot free-motion raises and lowers the presser foot with each stitch to hold the fabric on the stitch plate while a stitch is being formed.	
13	The Spring foot free-motion mode is used together with the optional Open-Toe Free- motion Foot.	
	The Spring foot free-motion mode is especially good to use when sewing contemporary quilts with different fabric heights.	
14	Touch OK to close the settings menu.	
15	When the machine is set for free-motion sewing the feed dogs are lowered automatically.	

Settings menu

The machine settings field now shows that you have set your machine for Spring foot free-motion sewing.



Select any of the built in stitches and sew Spring foot free-motion.

17 Most free-motion sewing is stitched with a straight stitch or with a zigzag stitch. However all stitches can be sewn in freemotion mode. Your movement of the fabric will determine how the stitch will look like.