

# Buttonholes

- Side Positioning -



1

Set your machine in Embroidery Mode .


Selection menu.



2

Touch...

- Built-in Stitches
- category 1; Utility stitches
- subcategory 3; Buttonholes
- stitch number 7

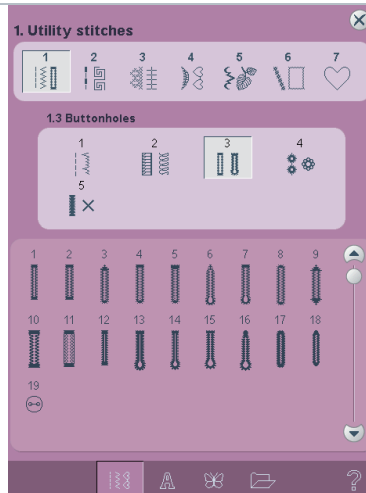


3

Touch Hoop Selection.



4


Select creative™ DELUXE HOOP.

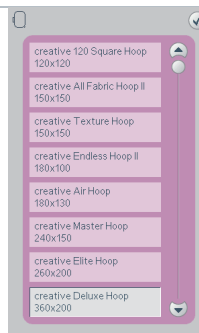

5 Touch Shaping.




6 Select Shape Line  
(first icon from the top).

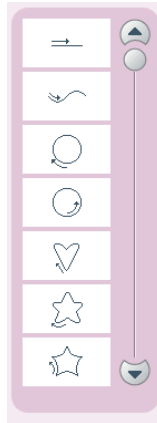

7 Touch Rotation.




8 Touch in the center of the Wheel to rotate  
by 90 degrees.

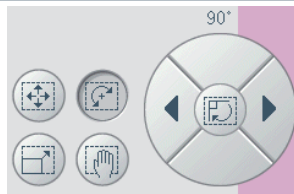

9 Touch Scale, to activate it.



10 Touch the shape (in the embroidery field) and drag  
and drop it to make the shape larger (longer).  
Fine tune with the Wheel.  
Set the size to 0.0x358.0

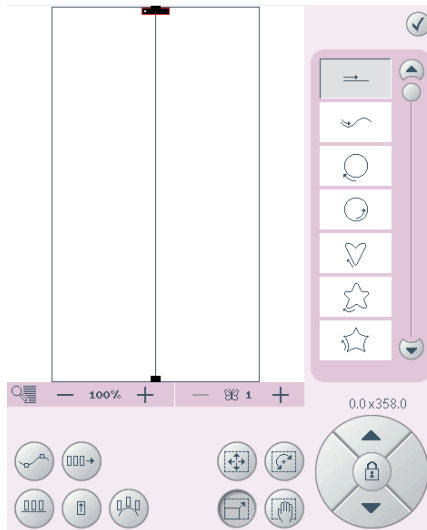

11 Touch Duplicate last to add more stitches to  
the Shape.



Set it to 6

12 Touch Select side positioning.




13 Touch the third side positioning icon to place the buttonholes in the opposite direction and upside-down.



14 Touch OK to confirm your shape and close Shaping.



15 We would like to place the design as far as possible in the right hand edge of the hoop.  
Drag and drop the design to the right.

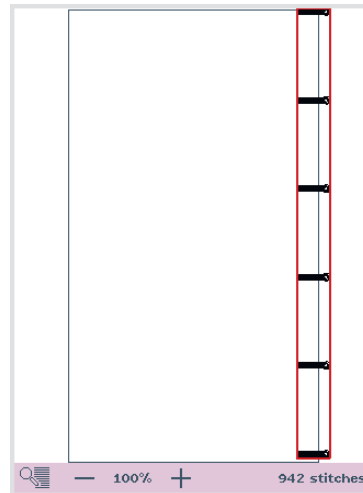

16 Touch Move design into hoop.  
The design will be placed as far out as possible in the direction you've placed it.




Would you like to sew your buttonholes in a vertical direction instead?  
No problem, let's continue with the exercise.

17 Selection menu.



18 Touch...  


- category 1; Utility stitches
- subcategory 3; Buttonholes
- stitch number 1

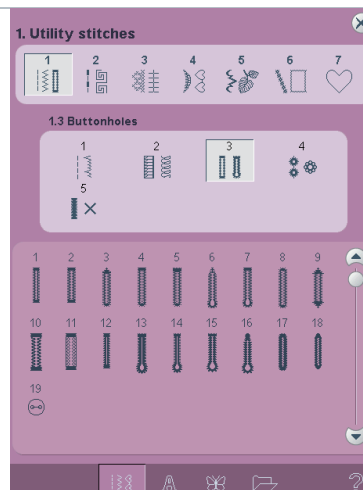

19 Touch Shaping.




20 Select Shape Line  
(first icon from the top).

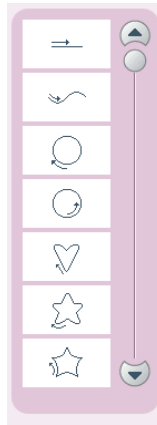

21 Touch Rotation.



22 Touch in the center of the Wheel to rotate  
by 90 degrees.

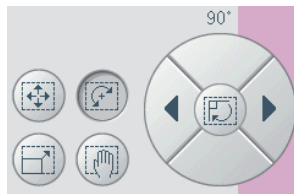


23 Touch Scale, to activate it.



24 Touch the shape (in the embroidery field) and drag  
and drop it to make the shape larger (longer).

Fine tune with the Wheel.  
Set the size to 0.0x358.0

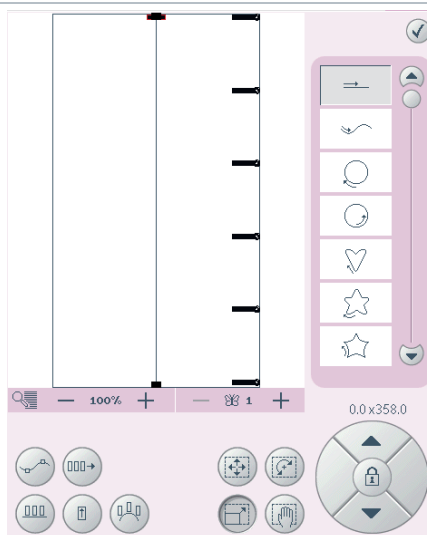

25 Touch Duplicate last to add more stitches to  
the Shape.

Set it to 6



26 Touch Select side positioning.



27 Touch the second side positioning icon to place the buttonholes vertically along the shape line.




28 Touch OK to confirm your shape and to close the Shaping pop-up.



29

We would like to place the design as far as possible in the left hand edge of the hoop.

Drag and drop the design to the left.

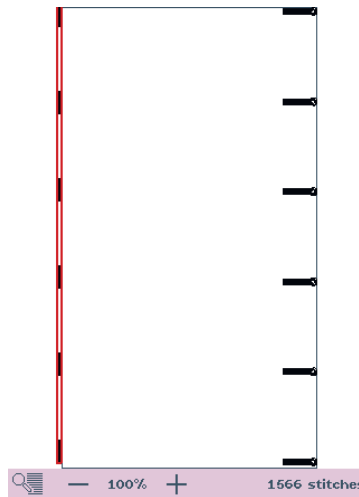

30

Touch Move design into hoop.

The design will be placed as far out as possible in the direction you've placed it.



31

- Hoop your fabric
- Attach the creative™ DELUXE HOOP on the embroidery arm.
- Touch Embroidery toggle icon to move to embroidery Stitch out mode.
- Start to embroider.

