




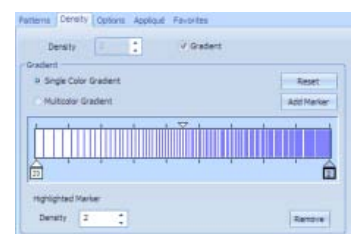
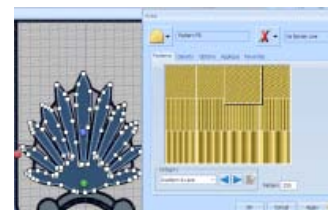



5D™ Embroidery Software Owner's Class

5D™ Design Creator 'Sunrise Apartments'

1. Open 5D™ Embroidery Extra .
2. QuickLink to 5D™ Design Creator . The ExpressDesign Wizard will open.
3. Choose Create Express Embroidery then click Next.
4. Click View Picture .
5. Browse  to Documents\5dembroidery\samples\5demb\pics2\fashion then click OK.
6. Select 1CFa14.png found on the bottom row, fourth column then click Next.
7. No Rotation is necessary, just click Next.
8. No additional cropping is needed, just click Next.
9. On the Design Size page, select Fit Design to Hoop then click Change Hoop.
10. Set the Hoop Group to Pfaff® creative vision™.
11. Set the Hoop Size to 260mm x 200mm – creative Elite Hoop.
12. Set the Orientation to Vertical then click OK followed by clicking Next.
13. On the Reduce Colors page, leave the colors as is, just click Next.
14. On the Choose Thread Colors page, set the Change All To Robison-Anton Rayon 40.
15. Under Background Color, notice the software determined black is the background color.
16. Click Pick Background Color  then click in the white area at the bottom of the Source picture to change the background color to white.
17. Check Automatically Remove Background Color then click Next.
18. On the Fabric and Stitch Type Options page, leave the fabric as Woven.
19. Remove the checkmark from Design Underlay and leave the Stitch Type and Fill.
20. Click Next. The design is created.
21. Click Finish and the design will appear on the Create page of 5D™ Design Creator.
22. Click in the center blue section that looks like sun rays then right click to bring up the Area box.
23. On the Patterns tab, under Category, click the drop down arrow and choose Gradient & Lace.
24. Choose the pattern in the top row, third column (255) then click Apply.
25. Move the Area box by clicking on the top bar and sliding it to the right until you can see the section you just changed.
26. Go to the Density tab.
27. Put a check mark next to Gradient.
28. Leave Single Color Gradient selected.
29. Select the marker on the left then change the Density to 20.
30. Select the marker on the right then change the Density to 2.
31. Click Apply to see the change.
32. Go to the Options tab.



33. Set the Angle to 180 then click Apply. This will place the dense area at the top and the less dense area at the bottom.

34. Click OK to close the Area box.

35. Go to the Edit tab.

36. With the gradient section still selected, click the Tie command above it in the FilmStrip.

37. Right click on the Tie command listed in the FilmStrip and select Insert Color Change.

38. Select the Medium Yellow in the Standard Quick Colors (2326 Daffodil) then click OK. Only the sun section will be changed to yellow.

39. Go back to the Create tab.

40. Select the main background then right click to bring up the Area box.


41. Change the Pattern Category to Gradient & Lace.

42. Select the pattern in the top row, last column (256) then click Apply. Move the Area box over to the right to see the change.


43. Go to the Density tab.

44. Put a check mark next to Gradient.

45. Select Multicolor Gradient.

46. Select the marker on the left then click Thread Color Change .

47. Type 2300 (Ice Blue) in the Find Thread box then click OK.


48. Click the marker on the right and click Thread Color Change .

49. Type 2210 (Royal) in the Find Thread box then click OK.


50. Click Add Marker then slide the new marker to the right staying three notches to the left of the right marker.

51. Click Thread Color Change . Type 2523 (China Blue) in the Find Thread box then click OK.

52. Click Add Marker again and slide the new marker three notches to the right of the far left marker.

53. Click Thread Color Change . Type 2524 (Country Blue) in the Find Thread box then click OK.

54. Click Apply to see the change.

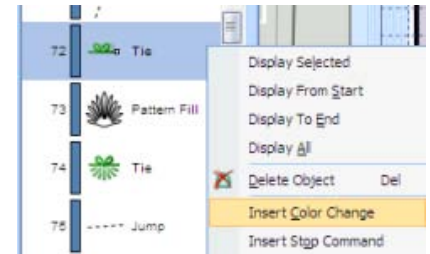

55. Go to the Options tab.

56. Set the Angle to 0 then click Apply. This will place the light area at the top and the dark area at the bottom.

57. Click OK to close the Area box.

58. Go to the Edit tab.

59. On the FilmStrip, select 6 – white Pattern Fill.

60. Hold down the Ctrl key on your keyboard.

61. Scroll down the FilmStrip and select Pattern Fill 51, 55 and 60.

62. Right click and choose Group Properties.

63. Set the Pattern Category to Climate then choose the pattern in the second row, second column (90).



64. Go to the Options tab.




65. Change the Angle to 333 then click OK.


66. Go back to the Create tab.


67. Using the Zoom bar, zoom in to 60%.

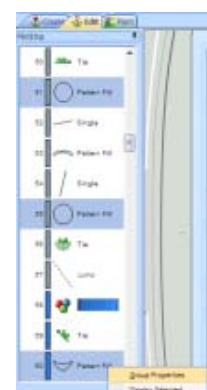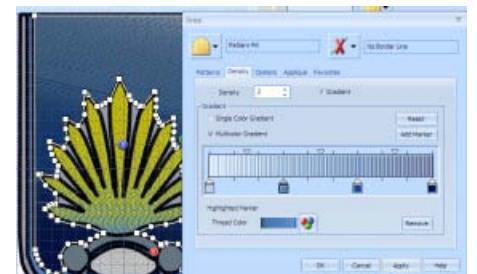
68. Click Overview and move the overview to the bottom section where the sun fill pattern is found.




69. Select the white section.
70. Move the  Origin marker until the suns fall directly across the center of the white section.
71. Move the Origin  marker in the other three sections as shown.
72. Click Zoom to Fit .

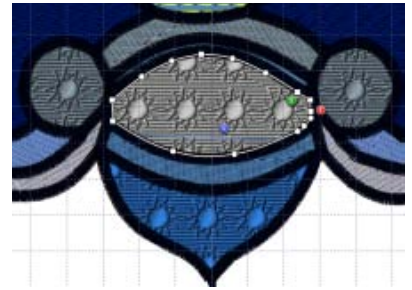



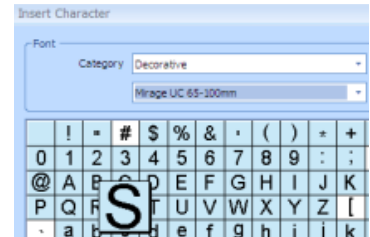

73. Go to the Edit tab.
74. Click Insert Character .
75. Set the Category to Decorative then choose Mirage UC 65-100mm.
76. Select the capital 'S' then click Insert. The S has been added at the end of the design.

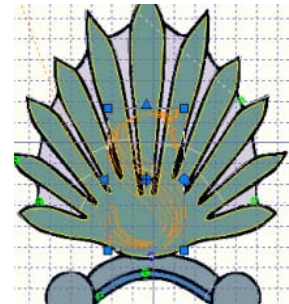

77. Move the S on top of the sun as shown.



78. Go back to the Create tab to see the final results. This design is a little big, let's resize it!
79. Click Hoop .
80. Leave the Hoop Group as My Hoops.
81. Click the drop down arrow next to Hoop Size and choose the 240mm x 150mm – creative Master Hoop then click OK.
82. Click Save As  and save the design in your Documents\5DEmbroidery\MyDesigns as Sunrise Apartments.can then click Save.
83. Click Save Embroidery . Save the design in your MyDocuments\5DEmbroidery\MyDesigns folder as Sunrise Apartments.vp3 then click Save.
84. Click Send 1  to send the design directly to your creative vision™ or as configured in 5D™ Configure.



New Features to Remember

- Working in true 3D on the Create tab.
- New Fill category – Gradient & Lace.
- See the changes to the design instantly.
- Multicolor Gradient.
- Group Properties – can change everything selected at one time.
- Resize the design by changing the Hoop Size.